HELIX RACK/CONTROL CHEAT SHEET

Power
It's alive!

SAVE
Press twice to save changes to preset

☰
Press to open menu with advanced functions and settings

PRESET
Turn to select presets

Press to open Setlists

Joystick
Use joystick to select block

Press ACTION and use joystick to move block

Turn to change block's model

Press to open model list


BYPASS
Press to turn selected block on and off

Hold to turn Global EQ on and off

ACTION
Press to open action panel for the selected block or page

VOLUME
Turn to control volume from 1/4", XLR, Digital, and USB 1/2 outputs

PHONES
Turn to control volume from the Phones output

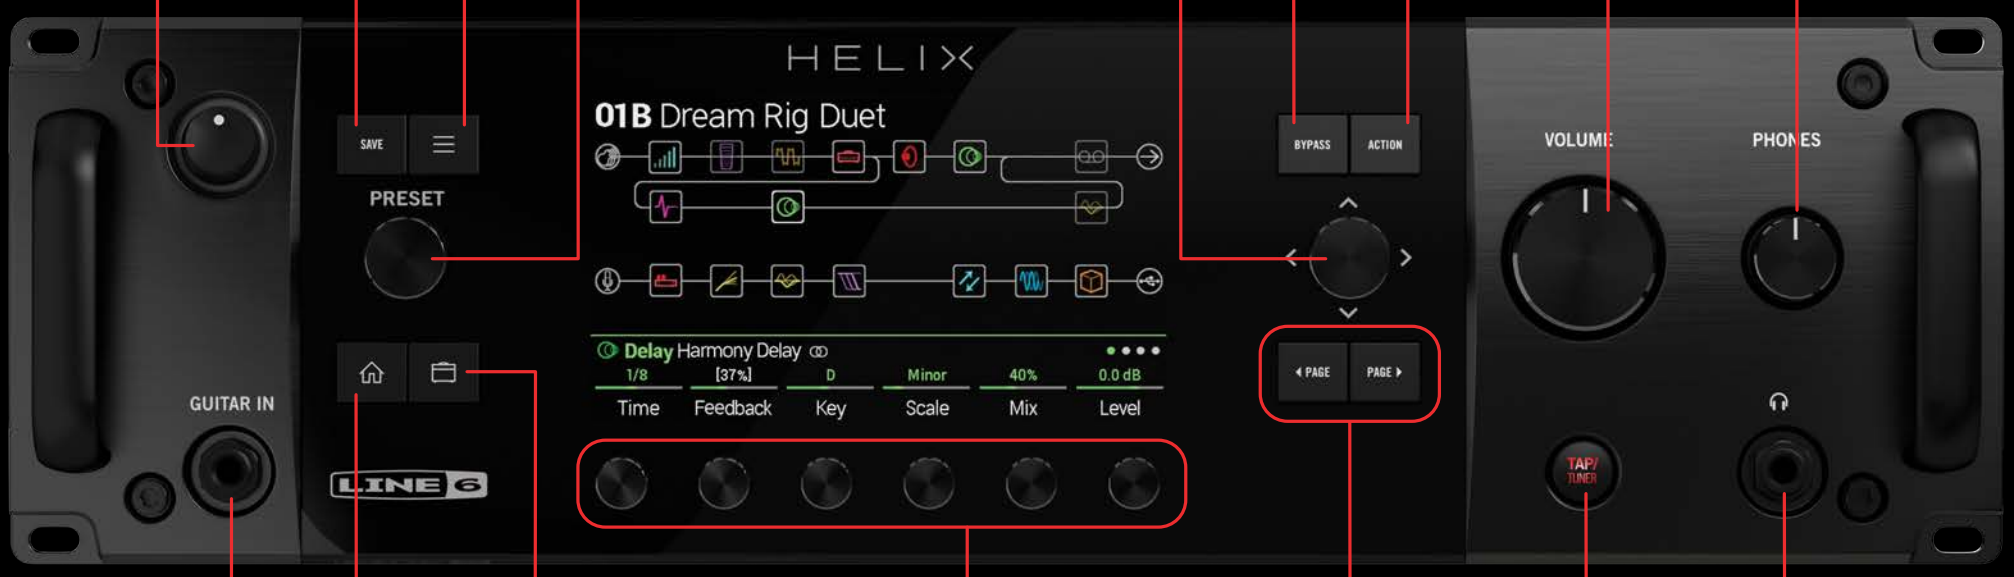

Guitar In
Connect your primary guitar or bass here; provides switchable pad and impedance selection

⌂
Lost? Press to return to the main Home screen

▭
Press to view Amp+Cab, Amp, or Preamp tonestacks

Knobs 1-6
Turn to adjust parameter

Press to engage function

Press to reset value

Press to toggle between Hz or ms and note values

Press and hold to jump to the Controller Assign page for that parameter

◂ PAGE ▸
Press to view more parameters for the selected item

TAP/TUNER
Press to set Helix's tempo

Hold to open the Tuner

🎧
Connect headphones here


Up/Down
Step on FS1/FS7 to select the next/previous bank of presets

Hold both FS1 and FS7 to change to Preset ^ and Preset v

Main LCD
Shows the current preset or tuner display

MODE
Step on FS6 to toggle between Preset and Stomp footswitch modes

Hold for Pedal Edit mode (edit blocks with your feet)

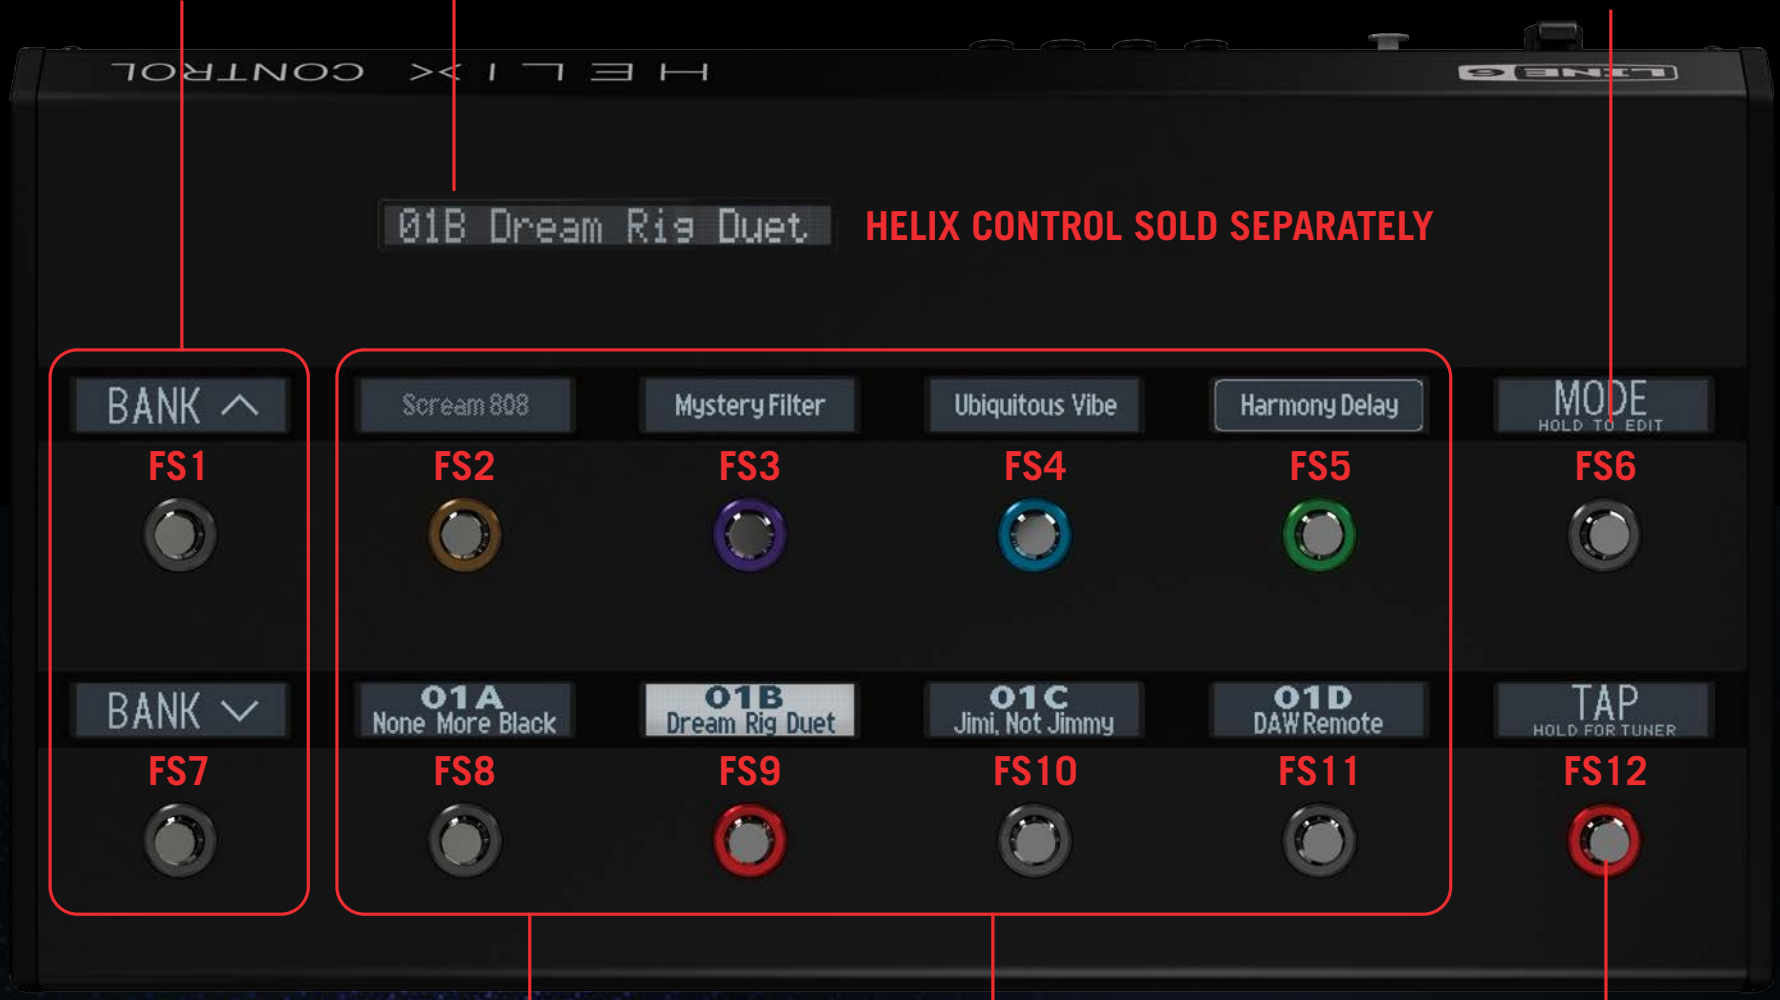

Preset Footswitch Mode
Step on a footswitch to select the preset

Step again to reload the preset

Stomp Footswitch Mode
Step on a footswitch to toggle its block(s) on and off

Touch a footswitch to select its assigned block or item

Touch repeatedly to cycle through multiple assigned items

Touch and hold to assign switch to the selected block

TAP/TUNER
Step on FS12 to set Helix's tempo

Hold to open the Tuner

Touch to open the tempo panel